

## Facade blind installation manual

1. Check to see whether the product was not damaged during the transport.
2. Check the delivery completeness according to the delivery note.
3. Unpack the product and position it in the building opening. (When looking from the interior, you must see the label on the right side.)
4. Measure the positions of the guiding rail holders.
  - Using the supplied hardware, attach the holders to guiding rail so that the ordered width of the blind is accurately positioned between the guiding profile centres.
  - **The holders must be placed evenly along the complete length of the rail. Position the upper holder of the guiding rail approx. 5 cm below the cover's bottom edge.**
  - Be sure the blind's vertical axis is maintained held the installation.
5. Slide the cover onto the attached guiding rails and secure it on the rails using the square nut with screw.
6. Secure the connecting holder in the cover using pliers.
7. Perform a pull test to verify whether all the connecting elements are properly tightened and fixed.
8. Secure the blind holders against movement. From below, slide the blind into the guiding rails and attach it to the upper cover.
9. Check to see whether the lift tape coming out of the bearing is routed downward freely through the slats.
10. The electric drive may be connected only by a qualified person (see the current regulations).
11. Upon completing the installation, check for proper blind movement.

**The manufacturer takes no responsibility for the product if a different number or type of mounting hardware is used.**

**To assess the loading capacity of the mounting base, it is necessary to consider a weight of 3.5 kg per 1 m<sup>2</sup> of the blind area and the dynamic load from the wind with respect to the blind position.**

**The assessment must be performed by the customer. The installation may be performed only by workers and companies trained by our company.**

