

BLIND OPERATING AND MAINTENANCE MANUAL

External blind operating and maintenance manual

External blind control

Blind tilting, lifting and lowering:

crank: by rotating the crank to the left or to the right

string: by pulling the front or rear string downwards

motor: using the blind switch or remote control

The external blind may be stopped and the slats tilted at any height.

External blind maintenance

External blinds do not require any special maintenance.

All moving parts are self-lubricating. **!!! DO NOT USE ANY GREASE!!!**

Clean only with water and detergents.

!!! DO NOT USE ANY ABRASIVES !!!

The functionality and lifetime of blinds are influenced by the manner of operation.

In winter, during freezing periods, check to see whether the bottom rail or the slat guiding pins have not frozen onto the guiding rails or window-sill before external blind operation. Carefully remove the icing, otherwise the blind may be physically damaged.

CAUTION:

The blind's resistance to the wind speed has been tested, see the wind speed mentioned on the blind label. At higher wind speeds it is necessary to raise the blinds to the top position.

The manufacturer takes no responsibility for damage caused by climatic influences or improper use.

Only authorized company can perform any repairs.